

Instruction Manual for Remote Control

This Remote Control will operate your Set Top box. Additionally it may be programmed to turn your TV On and Off.

Insert two new AAA batteries in the remote in the direction as indicated in the battery compartment.

TV Code Programming

Note: The Remote Control operates Sony TV's by default. If you have a Sony TV, point the Remote Control to the TV and press the Power button. If the TV operates, you do not need to program the Remote Control.

A. Program by Device brand code:

1. Manually turn on the TV.
2. In the back section of this manual, find the brand name and code number for your TV E.g. Panasonic TV: **001,005,009,010,015**.
3. Press and hold the "SET" button. Then press (tap) the "Power" button simultaneously, the LED will turn on solid, indicating the remote is in program mode. Release both buttons.
4. Enter the 3-digit Device Code (for example: code 005 under Panasonic TV). If the LED turns off, the code has been accepted by the remote control.
5. If the LED flashes twice, it means the code entered is incorrect,

and the remote control remains in program mode with a solid LED.

Re-enter the correct code number again. The Remote control will exit the program mode if the code is not entered within 8~10 seconds, at this point the LED will turn off.

6. Point the Remote Control to the TV and press the "Power" button. If the TV turns off, the remote is now programmed to operate the TV.

7. If the TV fails to operate, go back to Step 2 and enter the next code listed under the TV brand. Please be certain to try all codes listed per your TV's manufacturer.

B. Program by Auto Search:

1. Manually turn on the TV.
2. Press and hold the "SET" button. Then press the "Power" button simultaneously and hold them down for 3 seconds, The LED will begin flashing indicating the remote is in Auto Search mode. If the LED is not flashing, wait until the LED turns off and then re-press both the "SET" and "Power" buttons again.
3. Release both buttons and point the Remote Control to the TV. The POWER signal for TV is automatically transmitted to the device from the remote control (code scan). Once the TV switches off, immediately press any button (except SET button) to stop the Auto Search.

4. Switch On the TV again by pressing the "Power" button. If the TV operates, the Remote Control is programmed.

C. Program by Manual Search:

1. Manually turn on the TV.
2. Press and hold "SET" button, then press (tap) the "Power" button. The LED turns On solid indicating the Remote Control is in program mode.
3. Point the Remote Control to the TV and press the "Power" button once every 2 seconds until the TV turns off. The LED will flash each time.
4. Once the TV turns off, do not press any keys and wait until the LED on Remote Control turns off. The Remote Control is now programmed.

D. Volume Priority:

The remote controls the Volume of Set Top box by default. To control the Volume of your TV, Press and hold the "SET" and "Volume Up" buttons together at the same time, release both buttons. The remote volume/mute buttons will control your TV's Volume +/- and Mute functions. To change the Volume Control back to the Set Top box, press and hold the "SET" and "Volume Up" buttons together at the same time, release both buttons.



Brand Code List

BRAND	TV
Abex	011,286
Accurian	140,452
Accuscan	005,014
Acme	156
Action	002,006,010,042
ADA	167
ADC	152,154
Admiral	003,004,005,014,015,018,025,035,040,041,055,165,308,455
Advantz	049
Advent	030,080,087,094,101,238,326,456,457
Adventura	279
Adventuri	001
Adyson	011
Agna	030
Aiko	024
Aiwa	011,295,296,309
Akai	010,012,020,021,028,031,064,071,149,211,230,361,362,372,373,410,442
Alaron	037,040
Alba	011,012,045
Albatron	002
Alfide	064

Alleron	010,037,193
Amark	002,007,011,013,014,018,035,165
Ambassador	030,039
America Action	041
American High	001,021
Ampro	079
Amstrad	013,038,039
Amtron	001,041, 062
Anam	041
Anamnational	019, 062,150,169,184,293
AOC	002,006,010,011,012,013,041,042,151,152,155,159,264,280,288,341,429,439,461,476
Aomni	399
Apex	078,081,113,321,367,423
Apex Digital	033,042,078,081,083,113
Archer	002,165
Aspect	198
Astar	472
Asuka	045
Audinac	041
Audio-Technica	006
Audiovox	002,024,040,041,054,061,062,074,090,112,140,147,348,436,457
AUVIO	451,489
Aventura	038
Axion	147,281,454

Bang&Olufsen	291
Basicline	045
Baycrest	011,043
Baysonic	041
Beaumarck	004,006,010,040
Belcor	006,010,151
Bell&Howell	003,018,025,032,040,133,191
BenQ	139,215,226,383,462
Bluesky	258,386
Boxlight	118
Bradford	041,062
Brick	013
Brockwood	006,010,020
Broksonic	002,013,039,041,046,055,142,253,315,320,458,459
Brokwood	151
Candle	010,013,020,043,151,155,279
Capehart	002,004,006,010,011,024,280
Carnivale	010
Carver	018,037
CCE	122
Celea	081
Celebrity	001,149
Celera	081
Centrios	274

Centurion	155
Cetronic	184
Changhong	033,081,083,087,321
Cinego	016
Cineral	024,054,258
Citek	011,014
Citizen	001,002,003,006,007,010,011,013,018,020,021,024,038,041,043,048,049,054,055,062,127,151,155,184,230,253
Civet	042
Clairtone	042, 159
Clarion	041
Classic	006,010,020,024,081,184,321
COBY	359,364,463,464
Color voice	156
Coloryme	004,005,006,010,011,014,018,021,151,155,156
Colt	006
Commercialsolutions	014,133
Concerto	020,151,155
Conic	006
Concierge	235
Contec	041,042, 052,159,184,062
Cornea	192
Craig	038,040,041,049,184,062
Crosley	001,010,018,026,038,041,044,
Crown	013,020,025,041,062,064,184

Crownmustang	064
CTX	165
Curtis Mathes	001,003,005,006,010,011,012,013,014,015,018,020,021,025,028,032,036,040,041,054,056,071,077,124,127,131,133,151,155,160,191,230,249,318,460
CXC	041,184,062
Cybervision	258
Daewoo	006,007,013,024,054,061,064,064,138,139,151,152,155,156,162,163,164,181,184,185,213,225,246,247,249,256,324
Dayton	024, 151,155
Daytron	006,010,011,013,020,024
Dell	006,122,134,172,251,390
Denon	012,019,028,060
Denstar	062
Diamond Vision	220,304,331
Digimate	346
Digistar	078,087,238,251,270,272,348,384,385
Digital Lifestyles	479
Digital Stream	453
Dimensia	133,133
Disney	253,265
Dukane	198,066
Dumont	003,004,006,011,041,151,235
Durabrand	002,006,038,041,055,120,253,262,290,307,370

Dwin	025,077,085
Dynasty	184
Dynex	421
Eaton	021
Electroband	001,042,149,159
Electrograph	138
Electrohome	001,006,010,011,013,020,030,031,032,042,052,150,151,155,167
Elektra	003,004,061
Elite	045
Elite Video	297
Emerald	006,039
Emerson	006,011,012,013,014,029,030,032,037,038,039,040,041,042,046,048,049,054,055,061,062,141,142,155,166,168,169,171,174,175,176,177,179,181,182,183,184,186,187,191,193,249,253,282,290,304,309,310,313,315,325
Envision	006,010,011,013,092,151,155,341
Epson	097,100
ESA	038,071,290
Fisher	001,018,032,034,052,191,234,034
Flex Vision	074
Fortress	025
Fujitsu	040,043,067,091,105,193,297,338
Funai	001,013,038,040,041,062,141,184,193,290,309,325

Futuretec	184,062
Futuretech	041
Gateway	138,139,188
GE	001,005,006,008,010,012,014,015,019,021,049,054,077,124,131,133,144,150,151,155,160,167,186,194,218,232,245,190,317
Gemini	014
Gibraltar	001,004,006,010,151,235
Go Video	116
Go Vision	147
Gold Star	005,006,010,011,013,014,018,020,052,106,151,152,155,197,213,264,309,316
Goodmans	050
GPX	040
Gradiente	017,020,037,151,238,262,344,389
Grandtec	480
Granprix	040
Granada	011
Grundig	064,067,072
Grundy	040,041,062,193
Grunpy	040,041
Guestvision	299
Gvision	337
Haier	078,120,139,307,380,409,432
Hallmark	006,040,041,044,046,151,155

Hannspree	132
Harley-Davidson	001,006,010,021,040,041,141
Harman/Kardon	018
Harvard	041,062
Hauppauge	403
Havermy	025
Heathkit	004
Helios	110
Hellokitty	054
Hewlett-Packard	336,465,481
Hikone	045
Himitsu	041,062,086
Hisense	078,209,284,345
Hitachi	001,003,004,005,011,012,013,014,015,018,019,020,028,031,040,042,052,066,123,141,151,155,198,199,200,254,255,257,282,309,334,437,448,482
Hyundai	103,110,369,466,467
ILO	259,290,298,351,357,362,408,413
IMA	006,040,041,046,062
InFocus	133
Infinity	018,314
Initial	259,357,357
Insignia	038,173,228,238,252,253,272,290,307,325,381,417,420,477