


# Operating Instructions For The UR5-8400 Cable Remote Control

UR5-8400

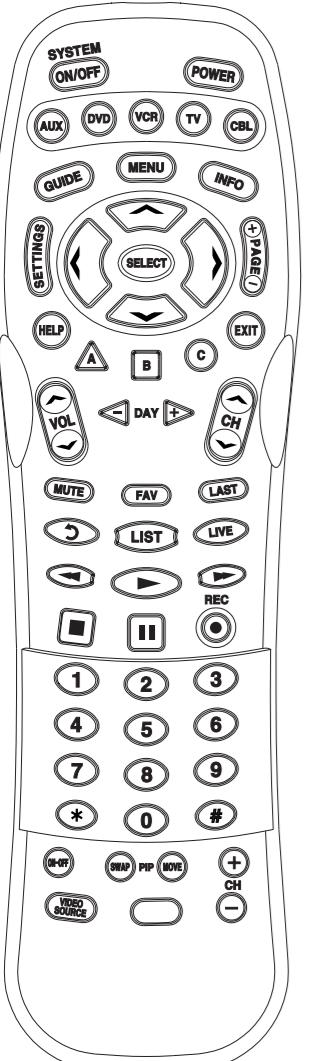

## 1 Introduction


The remote control is designed to operate the Scientific Atlanta Explorer 8000, Pioneer Voyager DVR and the Pace Micro DVR Series. You can also control the majority of TV, VCR, DVD and AUDIO equipment on the market as shown below.

CABLE : Cable Converters    TV : Televisions  
VCR : VCRs and TV/VCRs    DVD : DVD Players  
AUX : Audio Receivers, etc.

## 2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

- STEP1 Remove the battery compartment cover on the back of your remote control.
- STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3 Replace the battery compartment cover.

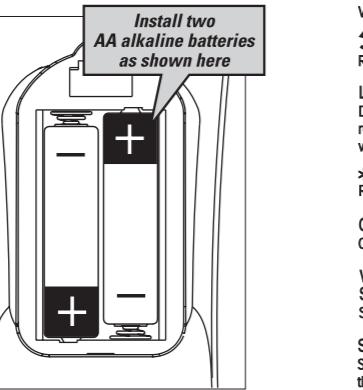

## 4 Operations


**Default State:**  
**Device Default: CABLE**  
Volume Default: You have the option of controlling your TV volume and mute through the Cable box, VCR or DVD. Refer to section G for programming the volume and mute through your Cable box, VCR or DVD.

**Channel Default:** You have the option of controlling your CABLE channel and number keys through the TV or VCR. Refer to section F for programming the channel and number keys through your TV or VCR.

**System On/Off button:**  
This button is designed to send out power commands for two, three, four or all five devices with one button press. Please refer to section E for details.

Universal Remote Control, Inc.  
[www.universalremote.com](http://www.universalremote.com)  
OCE-0017D Rev 03 (11/29/05)

## 3 Button Functions

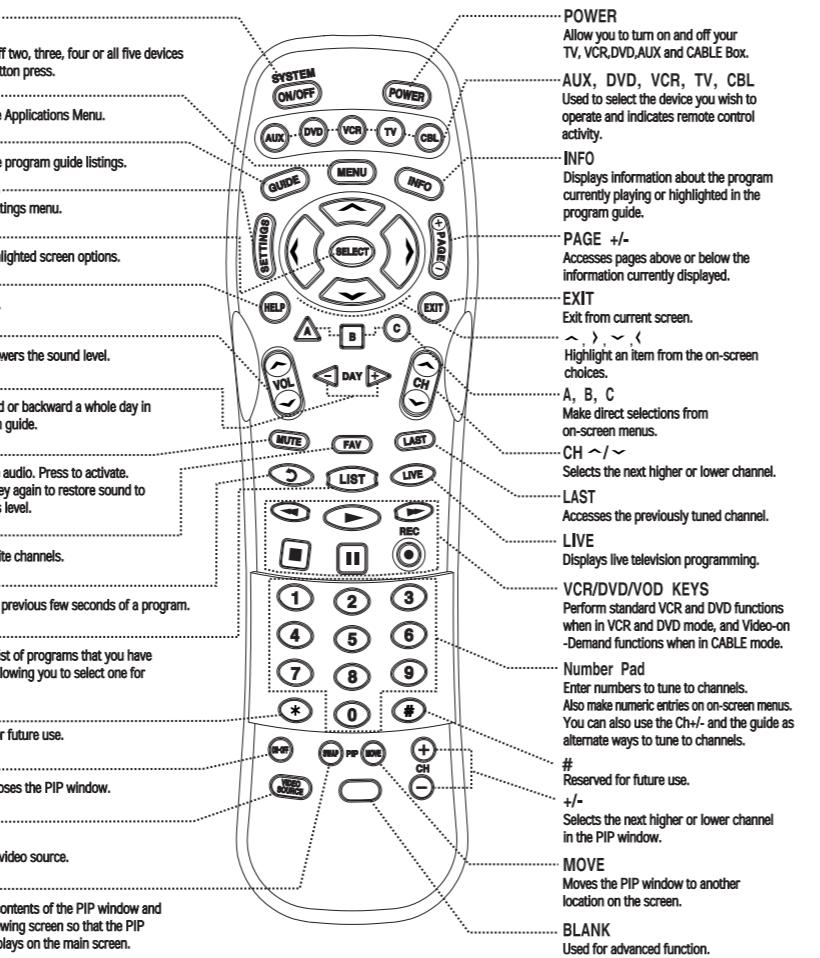

## 5 Programming the Remote Control

### A. Three-Digit Code Programming Method.

The remote control can be programmed by pressing in a three-digit code number that corresponds to particular manufacturers and brands of Audio/Video equipment. The three-digit code numbers are listed in the code table of the instruction manual.

- STEP1 Turn on the equipment you wish to program. (TV, VCR, DVD or AUX)
- STEP2 Press the [DEVICE] button (TV, VCR, DVD or AUX) to be programmed and [SELECT] button simultaneously for 3 seconds. The device LED will turn on indicating the unit is ready to be programmed.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

- STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables.

\*Tip: The equipment will turn off when the correct three-digit code number has been entered. You can verify you have selected the correct code by pressing the [POWER] button, the equipment should turn on or turn off.

\*Note: If there is more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

- STEP4 Store the three-digit code number by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

\*Note: Try all the functions on the remote control. If any of the functions do not work as they should, repeat from Step 2 using the next three-digit code number from the same brand list.

Note: Ten blinks is equal to the number 0.

### B. Auto Search Method.

If the three-digit code numbers assigned to your brand do not turn off your equipment or the code tables do not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by the following steps:

- STEP1 Turn on the equipment you wish to operate.
- STEP2 Press the [DEVICE] button (TV, VCR, DVD or AUX) to be programmed and the [SELECT] button simultaneously for 3 seconds. The [AUX] device LED will turn on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

- STEP2 Press the [TV] device button to pick up the TV code table.

\*Tip: The device LED will light on for 20 seconds. The next step must be entered while the LED is on.

- STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your TV brand from the code tables.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while LED is on.

- STEP4 Store the three-digit code number by pressing the [AUX] button once again. The device LED will blink twice to confirm that the code has been stored.

\*Tip: You can verify that you selected the correct code by pressing the [POWER] button. The equipment should either turn on or turn off.

- STEP4 Press the same [DEVICE] button to store the code. The device LED will blink twice to confirm that the code has been stored.

### C. To Find the Three Digit Code Number That was Stored in the Device.

- STEP1 Press the [DEVICE] button (TV, VCR, DVD or AUX) you wish to verify and the [SELECT] button simultaneously for 3 seconds. The device LED will turn on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

- STEP2 Press the [CH+] button to save the power commands you stored. The [CBL] button will blink twice to confirm the saving.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

- STEP3 Press the [INFO] button.

The device LED will blink number of times indicating the number of each digit of the code number. Each digit is separated by a 1 second interval of the LED being turned off.

Example: One blink, three blinks and eight blinks with an interval of 1 second of LED being turned off, indicates the code number 138.

Note: Ten blinks is equal to the number 0.

### D. Programming a second TV to AUX Mode.

- STEP1 Press the [AUX] button to be programmed and the [SELECT] button simultaneously for 3 seconds. The [AUX] device LED will turn on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

- STEP2 Press the [TV] device button to pick up the TV code table.

\*Tip: The device LED will light on for 20 seconds. The next step must be entered while the LED is on.

- STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your TV brand from the code tables.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while LED is on.

- STEP4 Store the three-digit code number by pressing the [AUX] button once again. The device LED will blink twice to confirm that the code has been stored.

\*Tip: You can verify that you selected the correct code by pressing the [POWER] button. The equipment should either turn on or turn off.

- STEP4 Press the same [DEVICE] button to store the code. The device LED will blink twice to confirm that the code has been stored.

\*Tip: Press the [DEVICE] button and the [POWER] button you wish to store in the [SYSTEM ON/OFF] button and repeat this until you stored all the power commands into the [SYSTEM ON/OFF] button.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: Press the [CBL] button and the [SELECT] button simultaneously for 3 seconds. The [CBL] device LED will turn on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

\*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

To return to original state:  
If you wish to restore the TV volume control in CBL mode, repeat the above steps by pressing [TV] in STEP3.

## H. Programming For Advanced Function.

In the CBL mode, the BLANK button can be programmed to act as a macro or favorite channel button. You can send out up to ten commands with one button press.

STEP1 Press the [CBL] button to select the CBL mode.

STEP2 Press the BLANK button and [SELECT] button simultaneously for 3 seconds. The [CBL] device LED will turn on for 20 seconds.

STEP3 Press up to 10 buttons you wish to store. The [CBL] device LED will blink once for each command entered.

STEP4 Press the [CH+] button to store the functions that were selected. The [CBL] device LED will blink twice to confirm the storage of functions.

## I. Low Battery Warning.

When the batteries are low and need to be replaced with fresh batteries, the remote control LED will blink 2 times in sequence whenever a [POWER] button is pressed to turn on equipment.

## J. Memory Lock System.

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

## K. Write your device Set-up codes.

TV	Set-up Code Number:	<input type="text"/>	<input type="text"/>	<input type="text"/>
VCR	Set-up Code Number:	<input type="text"/>	<input type="text"/>	<input type="text"/>
DVD	Set-up Code Number:	<input type="text"/>	<input type="text"/>	<input type="text"/>
AUX	Set-up Code Number:	<input type="text"/>	<input type="text"/>	<input type="text"/>

If you wish to store the CBL volume control in CBL mode, use the following steps.

## 6 Set-up Code Tables

CABLE TV		
Remote	Converter	Code No
UR5-8400	Scientific-Atlanta Explorer 8000, Pioneer Voyager DVR, Pace Micro DVR Series.	001
	Motorola DCT6208 Motorola DCT2XXX and DCT5XXX Series	004

TV	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADMIRAL	072 081 160 161 096
ADVENT	247
AIKO	103
AKAI	006 146 248
ALARON	028
AMARK	112 143
AMERICA ACTION	043
AMPRO	073 167
ANAM	043 054 055 056 080 112
AOC	058 006 004 112
APEX DIGITAL	225 226 037
AUDIOVOX	076 103 043 232 035
BAYSONIC	043
BELL&HOWELL	072
BRADFORD	043
BROKSONIC	096 212
CANDLE	006 002 003 004
CAPEHART	058
CARVER	164
CELEBRITY	001
CETRONIC	043
CINERAL	103 120
CITIZEN	006 002 003 004 101 103 143
CLASSIC	043
CONCERTO	004
CONTEC	043 051
CORONADO	143
CRAIG	043 054 028
CROSLEY	164
CROWN	043 143
CURTIS MATTHES	006 004 101 143 011 072 081 120 164
CXC	043
DAEWOO	076 103 055 004 127 143 016 043 044 125 120
DAYTRON	004 143
DELL	174 004 041
DENON	011
DUMONT	004 073
DWIN	161
DYNASTY	043
DYNATECH	062
ELECTROBAND	001
ELECTROHOME	024 076 143
EMERSON	005 028 043 048 076 096 155 004 051 143 151 153 154
ESA	031
FISHER	007 057
FUJITSU	028 164 208 246 066

TV	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
FUNAI	028 043 052 211
FUTURETECH	043
GATEWAY	228 231 031
GE	006 073 130 144 160 161 004 008 009 034 056 074 091 155 081 120
GIBRALTER	004 073
GOLDSTAR / LG	004 106 119 110 112 113 127 143 084
GRUNPY	028 043
HALL MARK	004
HARLEY DAVIDSON	028 164
HARVARD	043
HITACHI	163 004 007 009 011 072 010 012 023 075 143 158
HP	027 039
HYUNDAI	049 067
INFINITY	164
INKEL	129
INSIGNIA	068
INTEQ	073
JBL	164
JCB	001
JCPENNEY	004 006 008 024 030 065 101 143 156 160
JENSEN	013
JVC	038 001 034 083 206 209
KENWOOD	006 001
KLOSS	002 059
KTV	006 043 143 154
LODGENET	072
LOEWE	207
LOGIK	072
LUXMAN	004
LXI	007 015 052 081 160 164
MAGNAVOX	006 003 004 022 059 060 061 063 064 127 164 094 160 028 229 035
MAJESTIC	072
MARANTZ	164 006
MATSUI	164
MATSUSHITA	080
SQUAREVIEW	052
SSS	004 043
STARLITE	043
SUPRE MACY	002
SUPREME	001
SVA	046
SYLVANIA	006 003 059 060 063 064 127 160 164 044 211
SYMPHONIC	052 211
SYNTAX OLEVIA	085 161 144 160
TANDY	081
TATUNG	056 062
MULTITECH	043
NAD	015 025
NEC	006 130 134 040 056 007 019 024 215 227
NIKEI	043
NIKKO	103
NTC	103
NUVISION	069
ONKING	043
ONWA	043
TMK	004
TNCI	073
OPTIMA	230 029 032
OPTIONICA	019 081
TOTEVISION	143

TV	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ORION	096 201 202 203 204 205 028
PANASONIC	034 056 080 164 219 222
PHILCO	006 003 004 024 056 059 060 063 064 127 143 164
PHILIPS	164 005 038 093 127 006 003 004 059 223
PIONEER	023 025 135 176 004 018 006 216 220
POLAROID	070 077 078 079
PORTLAND	004 143 103
PRISM	034
PROSCAN	144 160 161 167
PROSCAN	004 058 143 171 193 112
QUASAR	034 056
RADIO SHACK	004 019 127 143 043
RCA	160 161 144 156 065 006 004 023 024 056 074 152 081
REALISTIC	007 019
RUNCO	072 169 073 130 179 180 181 050
SAMPO	006 004 058 228
SAMSUNG	004 101 127 133 143 160 089 105 217 218 221
SANSEI	120
SANSUI	096
SANYO	007 053 057 082 020
SCEPTRE	250 036
SCOTCH	004
SCOTT	004 005 028 043 048 143
SEARS	004 007 015 028 030 057 082 094 143 160 052 164
SELECO	189
SEMIVOX	043
SEMP	015
SHARP	081 014 019 028 004 022 143 175
SIGNATURE	072
SOLE	213 214
SONY	001 126 139
SOUNDDESIGN	003 004 028 043
SPECTRICON	112
SQUAREVIEW	052
SSS	004 043
STARLITE	043
SUPRE MACY	002
SUPREME	001
SVA	046
SYLVANIA	006 003 059 060 063 064 127 160 164 044 211
SYMPHONIC	052 211
SYNTAX OLEVIA	085 161 144 160
TANDY	081
TATUNG	056 062
MULTITECH	043
NAD	015 025
NEC	006 130 134 040 056 007 019 024 215 227
NIKEI	043
NIKKO	103
NTC	103
NUVISION	069
ONKING	043
ONWA	043
TMK	004
TNCI	073
OPTOMA	230 029 032
OPTIONICA	019 081
TOTEVISION	143

TV	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
UNIVERSAL	008 009
VIDEO CONCEPTS	146
VIDIKRON	174 188 164 050
VIDTECH	004
VIEWSONIC	228 249
WARDS	004 064 164 008 009 019 028 060 061 063 072 074 143
WESTINGHOUSE	076 036
YAMAHA	004 006
KODAK	004
KEC	101 117
KENWOOD	034 150 014 048
KLH	024
KODAK	031 101
LLOYD	034
LOGIK	024
LXI	003 009 017 034 101 004
ZONDA	112

VCR & TV/VCR	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
HUGHES	004
INSTANTREPLAY	031
JCL	031
JCPENNEY	004 012 031 040 101
JENSEN	043
WARD	004 064 164 008 009 019 028 060 061 063 072 074 143
WESTINGHOUSE	076 036
YAMAHA	004 006
KODAK	004
KEC	101 117
KENWOOD	034 150 014 048
KLH	024
KODAK	031 101
LLOYD	034
LOGIK	024
LXI	003 009 017 034 101 004
ZONDA	112

VCR & TV/VCR	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SANSUI	043 135 048 025 034
SANYO	003 014 040 134
SCOTT	017 037 129 131
MINTEK	251
SEARS	003 004 008 014 017 081 101 010 031 034
MITSUBISHI	227
HITACHI	020
INKEL	005
INTEGRA	084 046 012 030 041 081 103 044
JCPENNEY	102 204
JENSEN	058
OPTIMUS	229
PANASONIC	22