 




# HD uDTA with TiVo® Lite UI

## Quick Reference

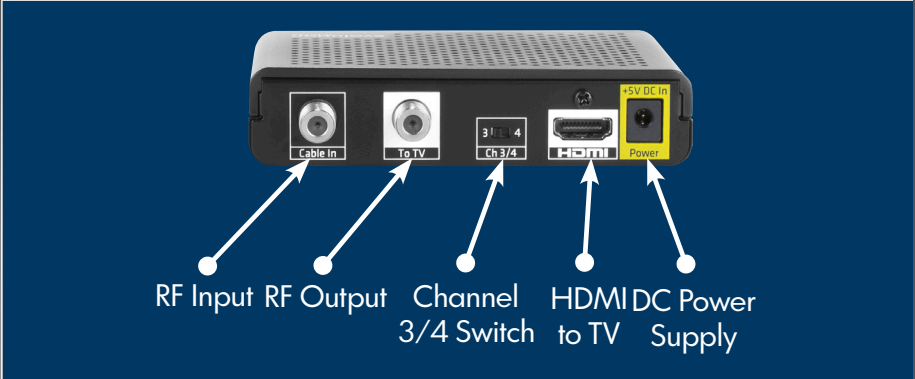

## TiVo LITE UI FUNCTIONS



### Grid Guide

To enter the grid guide press the **Guide** button on the remote.



### Mini Guide

Press the **OK** button on the remote while watching TV to access the Mini Guide.

### Info Banner

Press the **Info** button on the remote while watching TV to access the full Info Banner. Press the **Arrow Right** button for the basic Info Banner.

Press the **CH Up/Down** buttons to advance one channel up or down with the Info Banner displayed.

Input a **Channel Number** on the remote and wait 3 seconds and the channel will change to the number.

Use the **Arrow Up/Down** to switch through the **Program Information**, **Closed Caption** and **Audio Language** menus. Use the **OK** to change options in the **Closed Caption** and **Audio Language** menus.

Press the **Exit**, **Info** or **Arrow Left** buttons to return to live TV.

## SETTINGS MENU



### Main Menu

To enter the main menu press the **Menu** button on the remote.



**Favorite Channels** displays your favorite channels. Refer to the **Favorite Channels** section below for instructions on selecting your favorite channels.

Press the **Menu** button and select **Settings** to update your HD Set-Top Box settings. Press the **Arrow** buttons to navigate through the menu then hit **OK** to make your selection. Press **Exit** once or **Arrow Left** several times to return to watching live TV.

Select **Favorite Channels** to mark or unmark channels you receive and want displayed as your favorites in the Guide. Use the number buttons on the remote to jump to a channel.

Select **Closed Caption** to mark or unmark Closed Captioning **On/Off** and to select other custom settings.

**Turn on Parental Controls** – Use the number buttons on the remote control to enter a four-digit PIN, then enter the same PIN again for confirmation.

**Disable Parental Controls** – Enter your PIN. When Parental Controls are off anyone can view any shows or watch any channels.

**Rating Limits** – Choose the highest rating that may be watched without having to enter a PIN.

**Hide adult shows** – Select **Hide adult shows** to hide the titles and descriptions of any adult shows in the Guide and lock all adult shows, requiring PIN entry to watch.

**Lock channels** – Highlight and press **OK** on the channels you would like to lock or unlock. Use the number buttons on the remote control to jump to a specific channel. Channels with a lock will require a PIN to view.

**Change PIN** – While Parental Controls are on, select **Change PIN** from the **Parental Controls** screen. Enter a new PIN, then re-enter the new PIN. Select **OK** on the confirmation screen to save the new PIN.

**Audio Language** – Select a new Audio Language

**HDMI Setup** – Configure your HD uDTA with your HD TV

 
**SD Setup** – Configure your HD uDTA with your SD TV

**Remote Control** – Pair your remote to your HD uDTA. Press **Menu**, select Settings, select Remote Control and then select Remote Control Pairing. Follow the on-screen instructions.

 
**Video Window** – With video window on, you can continue watching your show in the top right corner of the screen while using the menus.

## Pair the Remote Control to the HD uDTA

1. Press the **Menu** button.
2. Select **Settings**.
3. Select **Remote Control** and then select **Remote Control Pairing**.
4. Follow the on-screen instructions.

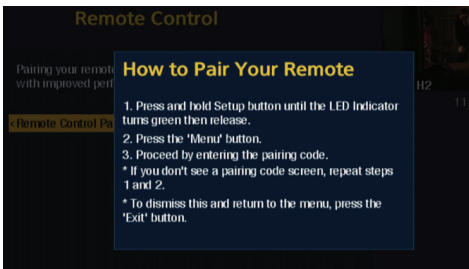



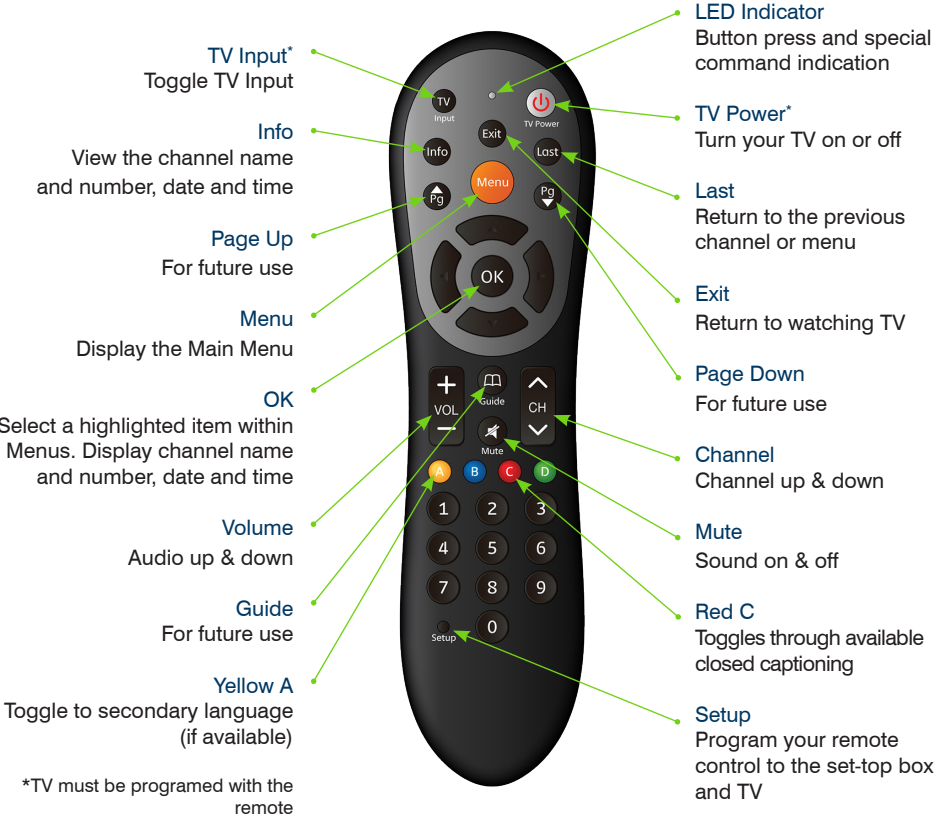










## REMOTE FUNCTIONS



\*TV must be programmed with the remote
 
## LED BLINK PATTERNS

LED Behavior	HD uDTA Status	Troubleshoot
Red   Green   Red   Green    	Device is looking for signal The HD uDTA is in Hunt Mode	Check RF connections
Green   Green   Red   	Device in Pending Initialization Mode (has QAM lock, acquired CAT and waiting for an activation)	Check device ID, send refresh
Green   Green   Green   	Device in Code Download Mode (code download pending)	Wait for device to complete download
Solid Green 	Device is in normal operations, decoding video	No action required
Blinking Green Light  	Device in Trouble Mode	Power cycle & check connections to verify device is not working